

# Introducing WORLD'S THINNEST STONE VENEER

Where **style** meets **innovation!** 

ACMETrendz.com.au

Discover ultra-thin stone which is 100% natural, lightweight, and textured veneers!

Our veneers redefine the aesthetics of the modern era, providing efficient solutions for extensive wall coverage and space-constrained environments.

Crafted utilising cutting-edge fibre resin technology, they offer unmatched flexibility and durability.



## Required items







ACME APPROVED SEALER



ACME APPROVED ADHESIVE/GLUE





ROLLER & BRUSH





SAND PAPERS

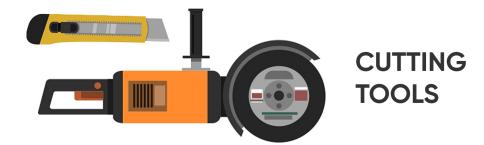

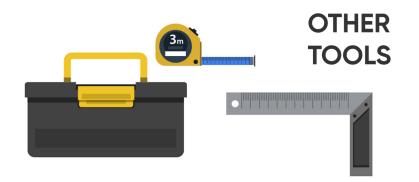




SAFETY EQUIPMENTS

## Stone veneer coating



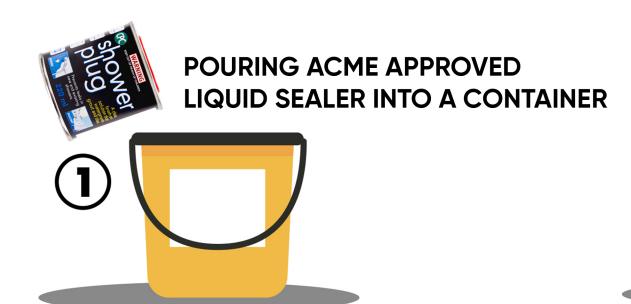






RUB ROLLER OR BRUSH ON ACME STONE VENEER TO APPLY COATING








WAIT AROUND 1 TO 2 HOURS
TO GET THE STONE VENEER SURFACE DRY

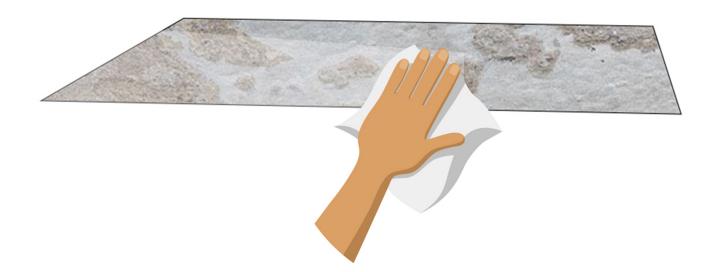



### Cut-to-size



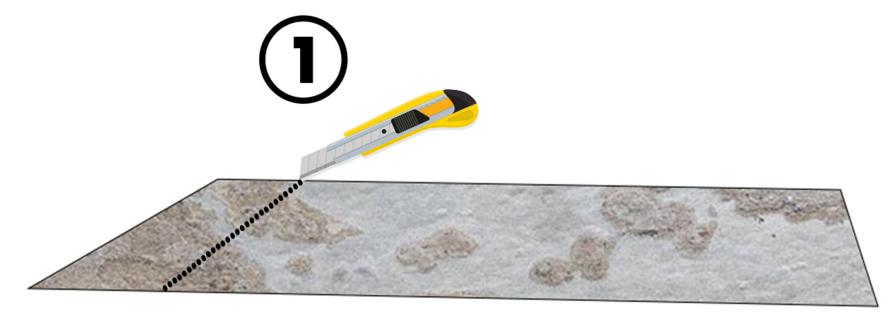


USE CUTTING TOOLS TO
CUT STONE VENEER IN REQUIRED SIZE



USE SAND PAPER TO SMOOTHERN NEWLY CUTTED STONE VENEER SHEET


# Apply adhesive/glue

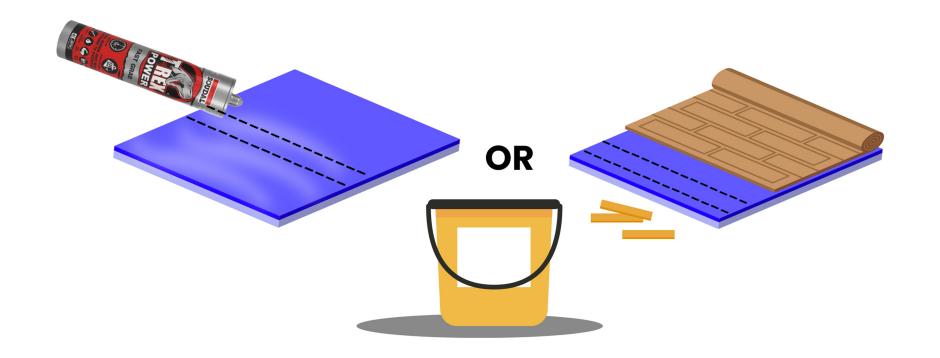

APPLY ACME RECOMMENDED ADHESIVE USING GUN AND THEN USE APPROPRIATE METAL SPREADER TO DISTRIBUTE ADHESIVE ON THE SURFACE EVENLY

### Install/paste stone veneer sheet



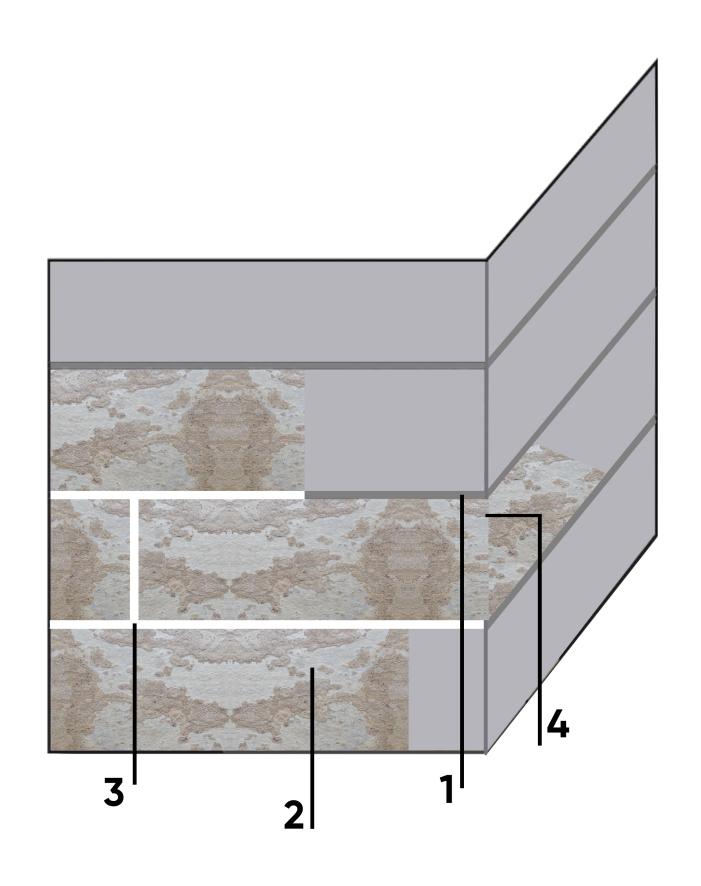

- 1. Mark your boundaries
- 2. Paste/stick the sheet on wall
- 3. Plaster the gap
- 4. Use sand-paper to smoothern the corner edges

The spacing between tile bases can vary in thickness according to your preference.

Ultimately, it can range from minimal, resulting in a straight-lined finish, to non-existent for a seamless appearance.



# STONE VENEER

### **CONTACT DETAILS**

3/50 Randall St Slacks Creek QLD 4127

**LET's TALK!** 

Phone 07 3102 3344